

# HARDIN MARINE

PART NUMBER: 130-1009


DESCRIPTION:  
SUPER COOLER DRIVE FOR MERCURISER BRAVO OUTDRIVES

CENTER PUNCH &  
DRILL 9/32 HOLE

7/8in

## TEMPLATE

CENTER PUNCH &  
DRILL 1/2 HOLE

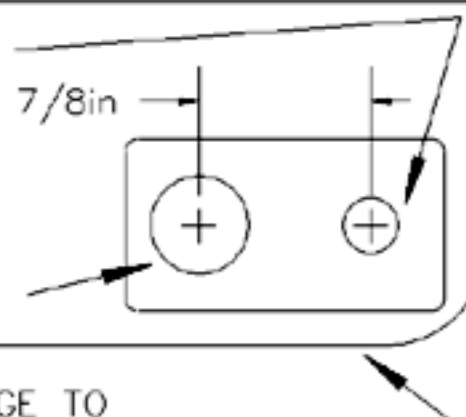

(4) 3/8-16x2" LONG BOLTS

(4) 3/8 AN WASHERS

SHOWER CAP

INSTALL (4) SPACERS IN COUNTERBORE

### SHOWER CAP INSTALLATION INSTRUCTIONS:

- 1) REMOVE THE (4) BOLTS FROM THE BEARING CAP.
- 2) PLACE THE (4) SPACERS IN THE COUNTERBORE HOLES.
- 3) PLACE SHOWER CAP ON TOP.
- 4) INSTALL THE 3/8 BOLTS AND WASHER THROUGH THE TOP OF THE SHOWER CAP. TORQUE BOLTS TO 30-35 FT. LBS.
- 5) CUT OUT TEMPLATE AND TAPE TO EITHER THE RIGHT OR LEFT SIDE OF CAVITATION PLATE. IF YOU HAVE A SWIM STEP YOU NEED TO CHECK TO MAKE SURE DRIVE DOES NOT HIT STEP WHEN RAISED, ADJUST POSITION ACCORDINGLY.
- 6) CENTER PUNCH HOLES AND DRILL 1/2 HOLE THEN 9/32 AS SHOWN IN TEMPLATE.
- 7) REMOVE BURRS IN DRILLED HOLES.
- 8) PLACE HOSE THRU THE 1/2 HOLE AND MOUNT WITH 1/4 BOLT, NUT & WASHER. TORQUE TO 120-125 IN. LBS..

STAINLESS STEEL HOSE

1/4 BOLT, NUT & WASHER

BOTTOM CAVITATION PLATE